

Limoss Battery Pack Diagnostics

Charging Instructions:

1. Connect the female plug of the transformer to the male plug of the battery. Then connect the charger to the main electrical supply outlet.

Battery →

Transformer →



2. The red light on the battery will flash while the battery is charging. (It may take several seconds after connecting to power source.)

Once the battery has consumed its useful life the recliner motor will not be operational until the battery pack is replaced with another or replaced with the transformer to be ran directly from the electrical outlet.



3. When the light changes to green, charging is complete. Disconnect the power supply unit from the main electrical source and then disconnect the transformer from the charger.

Leaving a fully charged battery connected to the main power source for an extended period of time may damage the battery.



4. Reconnect the battery to the recliner chair (if the cable had previously been disconnected.)

Limoss Battery Pack Diagnostics

Additional notes:

- If the device is left unused for a long period of time, the batteries will slowly self-discharge and the resulting over-discharge may damage the batteries themselves. It is advisable to fully charge the batteries at least once every 3 months.
- Due to their nature, rechargeable batteries have a limited life-span and are characterized by a gradual loss of power over time.
- Life of the battery under normal use are up to 300 uses per charge and can be recharged up to 1000 times.
- Do not separate, open or dismantle secondary cells, batteries or the device as a whole.
- Do not expose to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit the cells, batteries, or the device itself.
- Do not install in a closed container without protecting the positive and negative poles in that these could lead to accidental short circuits.
- Do not subject to mechanical shocks (avoid dropping, hitting, or placing any objects on top).
- Do not remove the cells or batteries from the battery pack for other uses.
- Should any chemical substances leak from the battery pack, avoid all contact with the substance. In the case of contact, wash the affected parts immediately in abundant quantities of water and seek medical help.
- Do not use the chargers or power supply units other than that supplied.
- Keep the battery container out of reach of children.
- Keep the battery pack clean and dry.
- Avoid soiling the connections on the device. If necessary, clean using a dry cloth.
- The batteries must be charged before use.
- Do not leave the battery pack connected when not being used for long periods.
- Recharge at least every 3 months
- Recharge if you hear a low audible alarm
- Solid green light indicates battery is fully charged and may be unplugged from power source.
- Alternating red & green lights or a solid red light indicates a battery failure and the battery should then be replaced.